



SPXVCP64 Installation Instructions

Please Note: Scanning Suite 3.0 should be installed prior to installing the 64-bit drivers.

1. Go to www.actron.com/downloads/, select your product, and click on the **Download 64-Bit Drivers** link
2. **Save** the spxvcp.amd64.zip file to your PC. We recommend saving the file to your **Desktop**. It can be deleted after the installation process is complete.

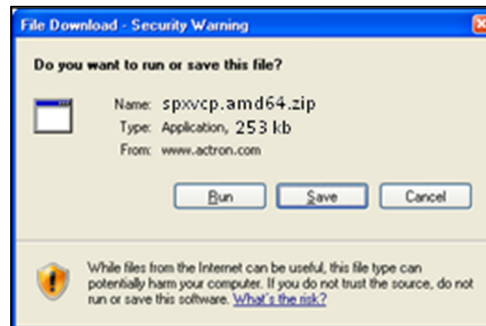


3. **Right-click** on the spxvcp.amd64.zip file, select **WinZip**, and select **Extract to folder C:\Documents and Settings\user\Desktop\spxvcp.amd64...**

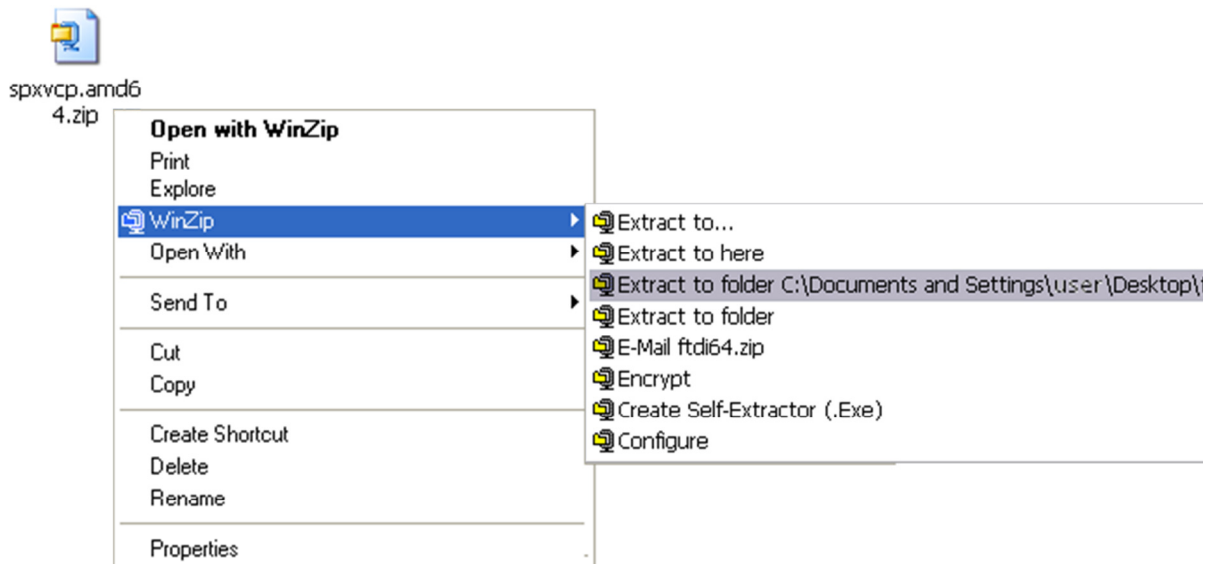


4. A new **spxvcp.amd64** folder will appear on your desktop. Double click the folder to open it.



5. Double click **dpinst.exe**

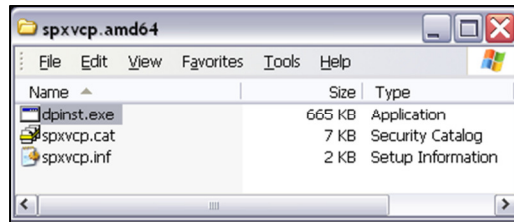


6. Click **Next**.

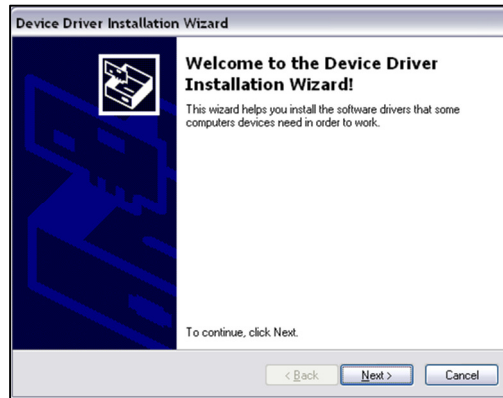

7. Wait while the drivers are installing.



8. Click **Finish**.

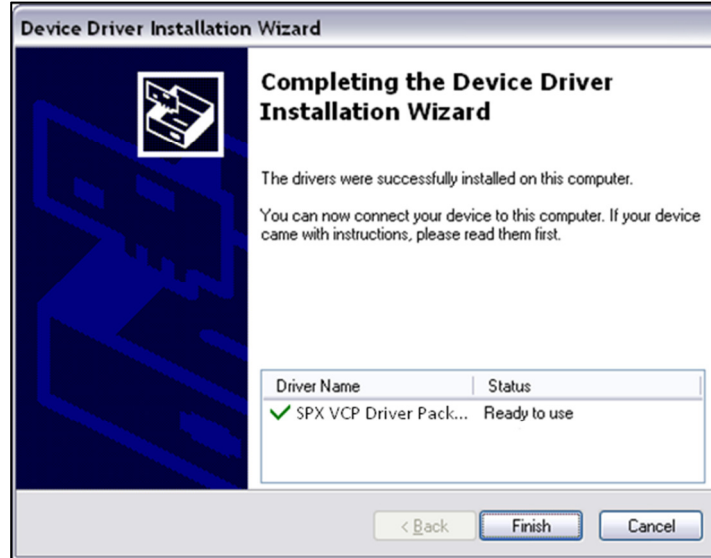

9. Driver installation is complete. The tool can now be connected to the PC.